



Sony Xplod CDX-MP30 Front Screen Motherboard Replacement

Replace the motherboard that controls the front screen.

Written By: Chao Chen



INTRODUCTION

Make sure you can explore the Xplod very well.



TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front Panel




- Press down the release button on the bottom left corner of the face plate.
- Then remove the face plate carefully.

Step 2 — Front Screen Motherboard






- Using the [Phillips #0 Screwdriver](#), unscrew the 4 (length - 11.11mm) screws on the front screen.

Step 3

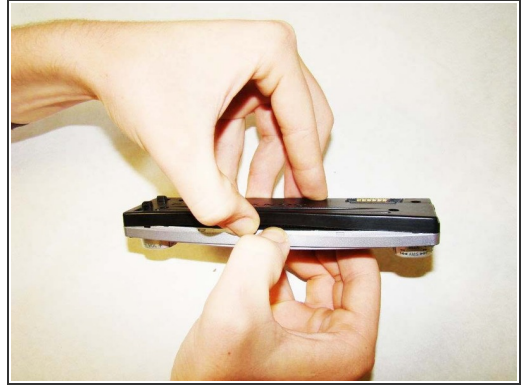


- Use two fingers to create a small gap in the top of the faceplate, as indicated in the picture.

Step 4

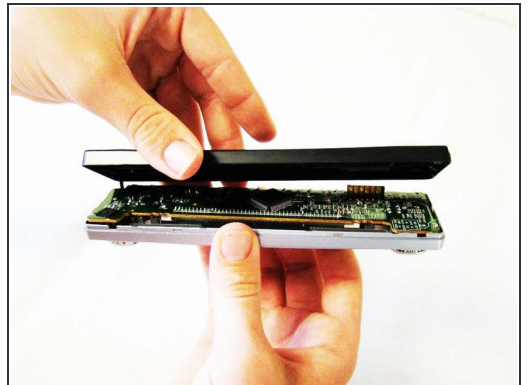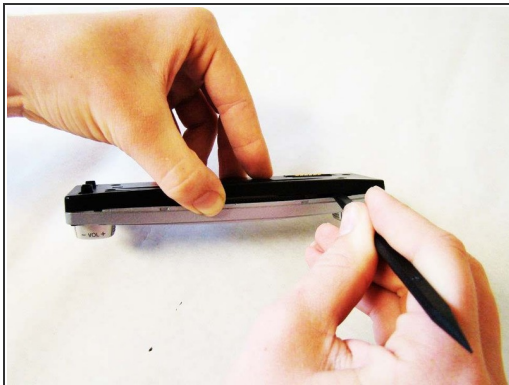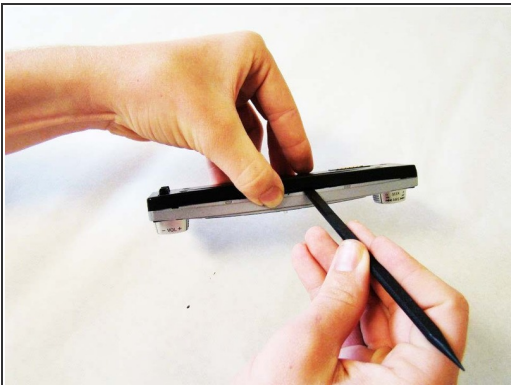

- Insert the flat end of the [Heavy-duty Spudger](#) into the opening you created.
- Slide it to the right carefully, until you feel the screen pop off.
- Make sure you keep the face of the screen pointed down as you carefully lift off the freed black portion of the screen - as shown in the picture.

Step 5

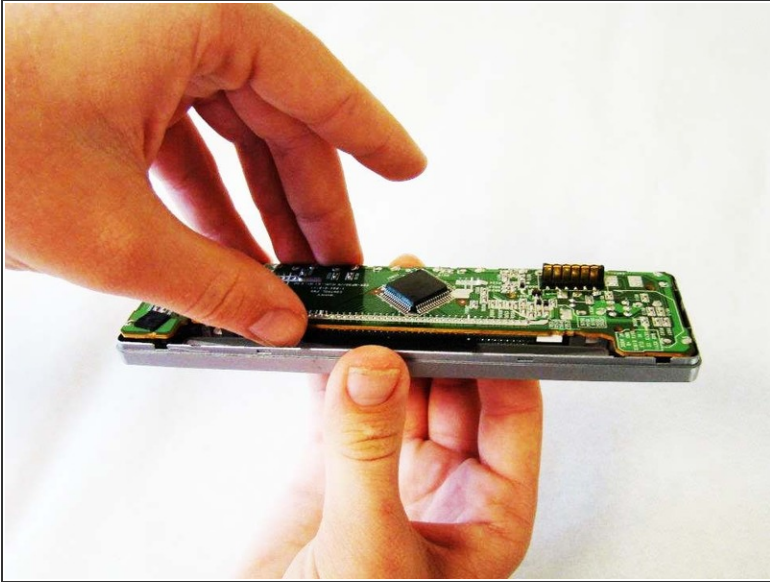

- Gently grab the Front Motherboard - as indicated in the picture - and lift it from the rest of the screen.

Step 6



- To remove the LCD, please refer to the [iFixit soldering guide](#).
- Once the LCD screen is removed, you have unrestricted access to the front screen motherboard.

To reassemble your device, follow these instructions in reverse order.

